

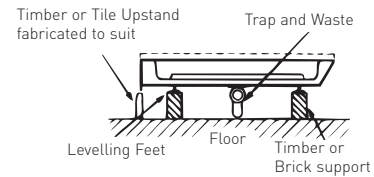
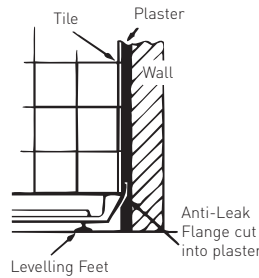


access shower trays

INSTALLATION

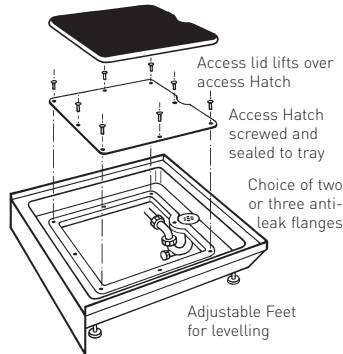


Drain & Trap
above Floor Level


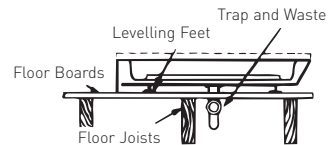


Drain & Trap
beneath Floor Level

RECTANGULAR

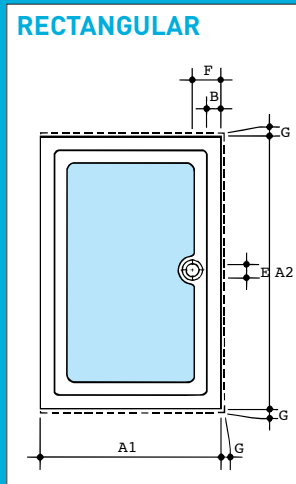

SQUARE

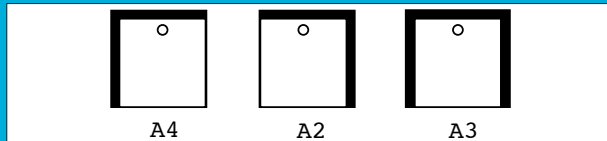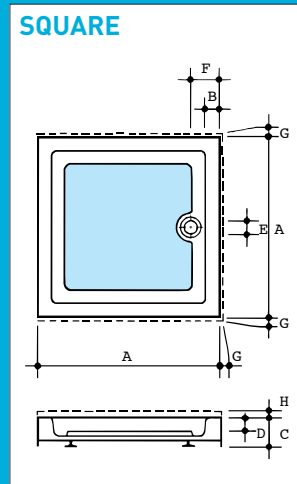

RECTANGULAR

Order Code	Anti-Leak Flanges	Size A1 x A2 ①
NS2064 A2	2	698 x 900 (27½" x 35½")
NS2064 A4	2	698 x 900 (27½" x 35½")
NS2064 A3	3	698 x 900 (27½" x 35½")

SQUARE

Order Code	Anti-Leak Flanges	A ①
NS2051 A2	2	762 x 762 (30" x 30")
NS2051 A3	3	762 x 762 (30" x 30")
NS2054 A2	2	900 x 900 (35½" x 35½")
NS2054 A3	3	900 x 900 (35½" x 35½")

MEASUREMENTS (common to all trays)

B	C	D	E ^②	F	G	H
60 (2½")	110 (4½")	65 (2½")	38 (1½")	120 (4½")	5 (½")	40 (1½")

- Notes:**
- ① Each anti-leak flange adds 5mm (3/16") to the dimension 'A' given above.
 - ② Supplied for 38mm (1½") waste. Installer may enlarge for 50mm (2") waste.
 - ③ Use waste NS2174 (subject to your local building code and water bye laws).